CHANGING THE SAFETY BELT

1. Open the lid of the belt. Pull out the belt from the reel untilt attachment holes are visual to enable inserting screws in place.

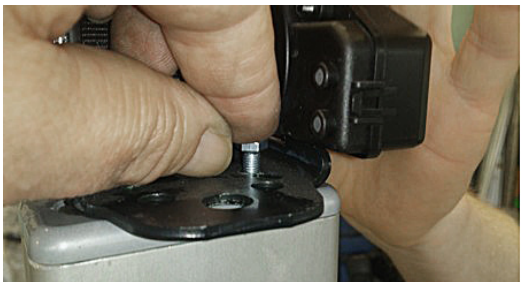

2. Insert and tighten screws.

3. Close the lid of the belt.

4. Pull out the belt to postition as shown in photo above.

5. Assemble fork and let the screws penetrate holes of the seat belt.